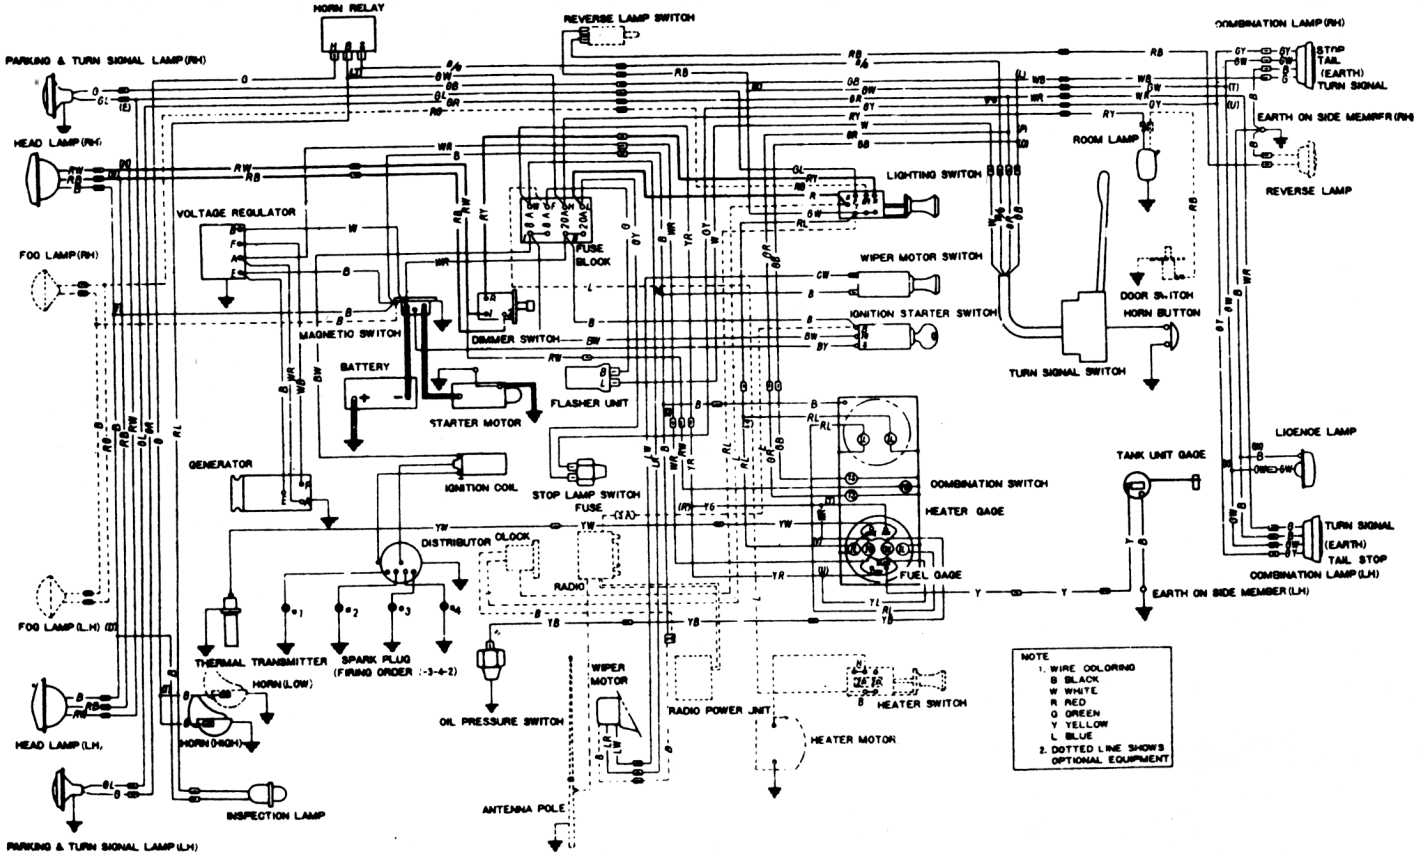
HORN RELAY
REVERSE LAMP SWITCH
COMBINATION LAMP (RH)
PARKING & TURN SIGNAL LAMP (RH)
HEAD LAMP (RH)
VOLTAGE REGULATOR
FOG LAMP (RH)
MAGNETIC SWITCH
BATTERY
STARTER MOTOR
GENERATOR
IGNITION COIL
DISTRIBUTOR
FOG LAMP (L.H)
THERMAL TRANSMITTER
SPARK PLUG
(FIRING ORDER :-3-4-2)
HORN (LOW)
HORN (HIGH)
HEAD LAMP (LH)
INSPECTION LAMP
PARKING & TURN SIGNAL LAMP (LH)
FUSE BLOCK
DIMMER SWITCH
FLASHER UNIT
STOP LAMP SWITCH
FUSE
CLOCK
RADIO
OIL PRESSURE SWITCH
WIPER MOTOR
ANTENNA POLE
RADIO POWER UNIT
HEATER MOTOR
HEATER SWITCH
LIGHTING SWITCH
WIPER MOTOR SWITCH
IGNITION STARTER SWITCH
TURN SIGNAL SWITCH
ROOM LAMP
DOOR SWITCH
HORN BUTTON
COMBINATION SWITCH
HEATER GAGE
FUEL GAGE
TANK UNIT GAGE
EARTH ON SIDE MEMBER (LH)
EARTH ON SIDE MEMBER (RH)
REVERSE LAMP
LICENCE LAMP
STOP TAIL (EARTH) TURN SIGNAL
TURN SIGNAL (EARTH) TAIL STOP
COMBINATION LAMP (LH)
NOTE
1. WIRE COLORING
B BLACK
W WHITE
R RED
G GREEN
Y YELLOW
L BLUE
2. DOTTED LINE SHOWS OPTIONAL EQUIPMENT